

Roof Rake Head Assembly


1. Depress the small buttons on the pole adapter and insert the pole adapter into the connector on the back of the roof rake head. Push firmly until the two small buttons pop up in the holes on the connector (Fig. 1).

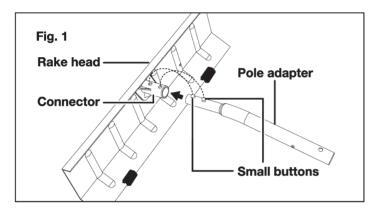

2. Align the holes of the metal braces with the hole on the end of the pole adapter. Secure with the long bolt and one nut (Fig. 2).

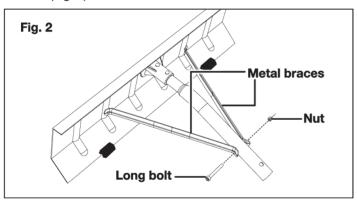


3. Connect the metal braces to the rake head with 2 small bolts and the remaining nuts, as shown (Fig. 3).

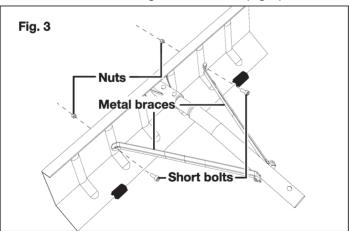

Connecting the Poles

1. To connect the roof rake head assembly with the pole handle, depress the small button at the end of the pole handle and insert it into the end of the pole adapter. Make sure the small button pops up in the hole on the pole adapter so the assembly is secured (Fig. 4).

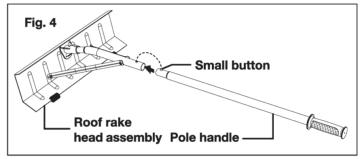

2. If additional reach is needed, connect the provided pole extensions between the pole handle and the rake head assembly. Make sure the small buttons pop up in the hole on the pole so the assembly is secured (Fig. 5).

