



Garden Rock Speaker with LED Light


Model / Bluetooth Name: QI004872



User Manual

Please read before use and keep for future reference.

☀️ CONTROLS AND KEY FUNCTIONS

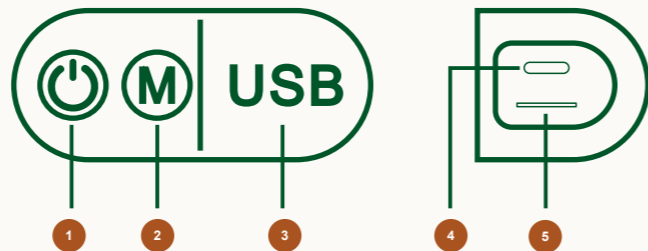

- 1 Power Button**
 - Press and hold (3–5 seconds): Turn the speaker on/off
 - Short press: Play/Pause music
 - Double press: Connect/disconnect TWS mode
- 2 Mode Button (M)**
 - Short press: Change LED light mode
 - Press 3 times: Switch between Bluetooth and TF card modes
 - Press and hold: Increase volume
 - Press and hold again after reaching max: Decrease volume
 - Double press: Skip to next track
- 3 Silicone cover:** Close securely after charging or inserting a Micro SD card.
- 4 USB-C charging port:** Use with the included cable and a 5V adapter.
- 5 Micro SD card slot:** Insert a compatible Micro SD card for direct music playback.

📶 SETUP AND USE



Charge the Speaker

Connect the included USB-C cable to the speaker and a 5V power adapter. The indicator light is red while charging and turns off when the speaker is fully charged.



Bluetooth Pairing

Press and hold the Power button to turn on the speaker. The indicator flashes quickly. On your phone or device, open Bluetooth settings, select **QI004872**, and wait for the indicator to stay on.



TWS (True Wireless Stereo) Mode

Turn on two Garden Light speakers. Double-press the Power / TWS button to enter TWS mode. A beep confirms the speakers are paired for stereo sound.



Micro SD Card Playback

Insert a Micro SD card into the slot. Triple-press the Mode button to switch between Bluetooth mode and SD card mode.



RGB LED Light

Press the Mode button once to cycle through the available RGB light settings.

☀️ SPECIFICATIONS

Model / BT Name	QI004872
Bluetooth Version	V5.4
Battery	800 mAh / 3.7V
Input	DC 5V
Speaker Output	5W / 4 Ω
Playing Time	3-4 hours
Charging Time	3-4 hours



SAFETY AND CARE

- Keep the device dry. Avoid exposure to water or damp environments.
- Keep out of reach of children to prevent injury or damage.
- Do not disassemble or attempt to repair the product yourself.
- Clean only with a soft, dry cloth. Do not use harsh chemicals or detergents.
- Avoid scratching the surface with sharp objects.