



Garden Stump Speaker with LED Light


Model / Bluetooth Name: QI004874



User Manual


Please read before use and keep for future reference.


☀️ CONTROLS AND KEY FUNCTIONS

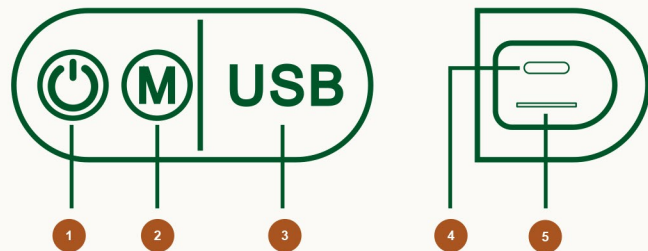



- 1 Power Button**
 - Press and hold (3–5 seconds): Turn the speaker on/off
 - Short press: Play/Pause music
 - Double press: Connect/disconnect TWS mode
- 2 Mode Button (M)**
 - Short press: Change LED light mode
 - Press 3 times: Switch between Bluetooth and TF card modes
 - Press and hold: Increase volume
 - Press and hold again after reaching max: Decrease volume
 - Double press: Skip to next track
- 3 Silicone cover:** Close securely after charging or inserting a Micro SD card.
- 4 USB-C charging port:** Use with the included cable and a 5V adapter.
- 5 Micro SD card slot:** Insert a compatible Micro SD card for direct music playback.


✂️ SETUP AND USE

Charge the Speaker
 Connect the included USB-C cable to the speaker and a 5V power adapter. The indicator light is red while charging and turns off when the speaker is fully charged.

Bluetooth Pairing
 Press and hold the Power button to turn on the speaker. The indicator flashes quickly. On your phone or device, open Bluetooth settings, select **QI004874**, and wait for the indicator to stay on.

TWS (True Wireless Stereo) Mode
 Turn on two Garden Stump speakers. Double-press the Power / TWS button to enter TWS mode. A beep confirms the speakers are paired for stereo sound.

Micro SD Card Playback
 Insert a Micro SD card into the slot. Triple-press the Mode button to switch between Bluetooth mode and SD card mode.

RGB LED Light
 Press the Mode button once to cycle through the available RGB light settings.

☀️ SPECIFICATIONS

Model / BT Name	QI004874
Bluetooth Version	V5.4
Battery	2000 mAh / 3.7V
Input	DC 5V
Speaker Output	8W / 4Ω
Playing Time	3-4 hours
Charging Time	3-5 hours

⚠️ SAFETY AND CARE

- Keep the device dry. Avoid exposure to water or damp environments.
- Keep out of reach of children to prevent injury or damage.
- Do not disassemble or attempt to repair the product yourself.
- Clean only with a soft, dry cloth. Do not use harsh chemicals or detergents.
- Avoid scratching the surface with sharp objects.