



Warning: With adult supervision!

Installation

- Warning: For home use only.
- Warning: only for outdoor use.
- Warning: may only be used under adult supervision.
- Warning: Max. User weight 50 kg and the number of people must not exceed 1.
- Warning: Attached parts of the article can lead to choking or choking hazard.
- Warning: Set up the swing on a flat and free surface in its vicinity (min. 2 m)
- Warning: keep the assembly and operating instructions for future reference.
- Warning: The ropes are adjustable in height between approx. 110-200 cm. Further adjustments or Misuse of the swing can result in injury or even death.
- Warning: Check all nuts and bolts for strength and tighten them if necessary.
- Warning: Check all parts of the swing for rust and replace rusted parts if necessary to ensure the safety of the gaming device.
- Warning: All moving metal parts must be oiled.
- Warning: covers of screws and sharp edges must be checked and if necessary replaced.
- Warning: swing seats, chains, ropes and other accessories are subject to signs of wear check, please replace the accessories once a year.
- Warning: The distance to the ground should be at least 35 cm.
The distance between the swing and the frame should be at least 30 cm.
The distance between the two suspension ropes of the swing should be 45 cm.
- Warning: Protect the swing from wind, rain, snow, direct sunlight and low temperatures. Therefore, store the swing indoors if possible.

Design of combination of 3-in-1



Age 0.5-3

Age 3-6

Age 6-Teens

Adjust the length of the rope

The length of the swing can be adjusted with the metal eyelet. Pull the rope through the Bracket to adjust the seat height to the user.



Attach the swing

1. Make sure that the frame or frame to which the swing is attached should be able to withstand the weight of the swing and the child permanently. The frame or frame should be firmly anchored to the floor.
2. Attach the clip and check that it is securely attached. Don't use a broken, rusty or dangerous accessories.

The hook should be positioned so that the opening (from the front view) towards you or into the opposite direction .

