




Bathroom Tower Cabinet

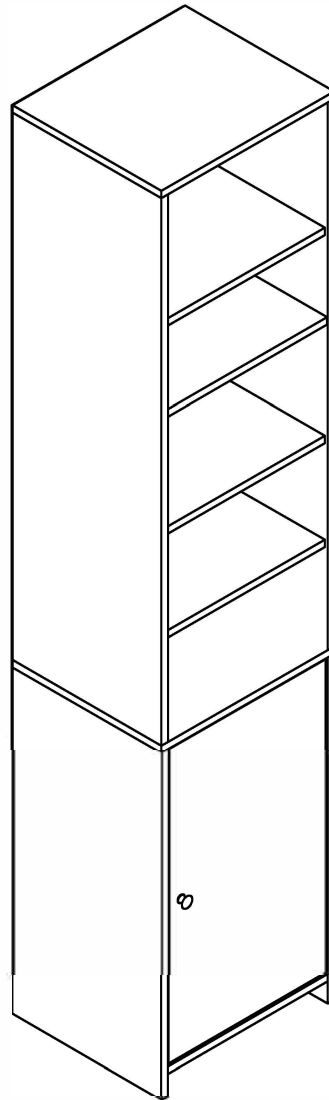




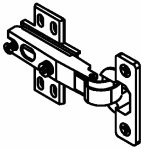









SKU: QI003091


Assembly Instructions




By:  **Quickway Imports inc.**

www.quickwayimports.com
info@quickwayimports.com


	 ø8*40		 ø4*18	
A × 16	B × 16	C × 16	D × 1	E × 1
	 ø7*50	 H1*1 H2*1	 ø6*30	 ø4*35
F × 2	G × 4	H × 1	I × 1	J × 1
		 ø3*14	 ø3.5*14	 ø20
K × 4	L × 40	M × 4	N × 13	O × 16

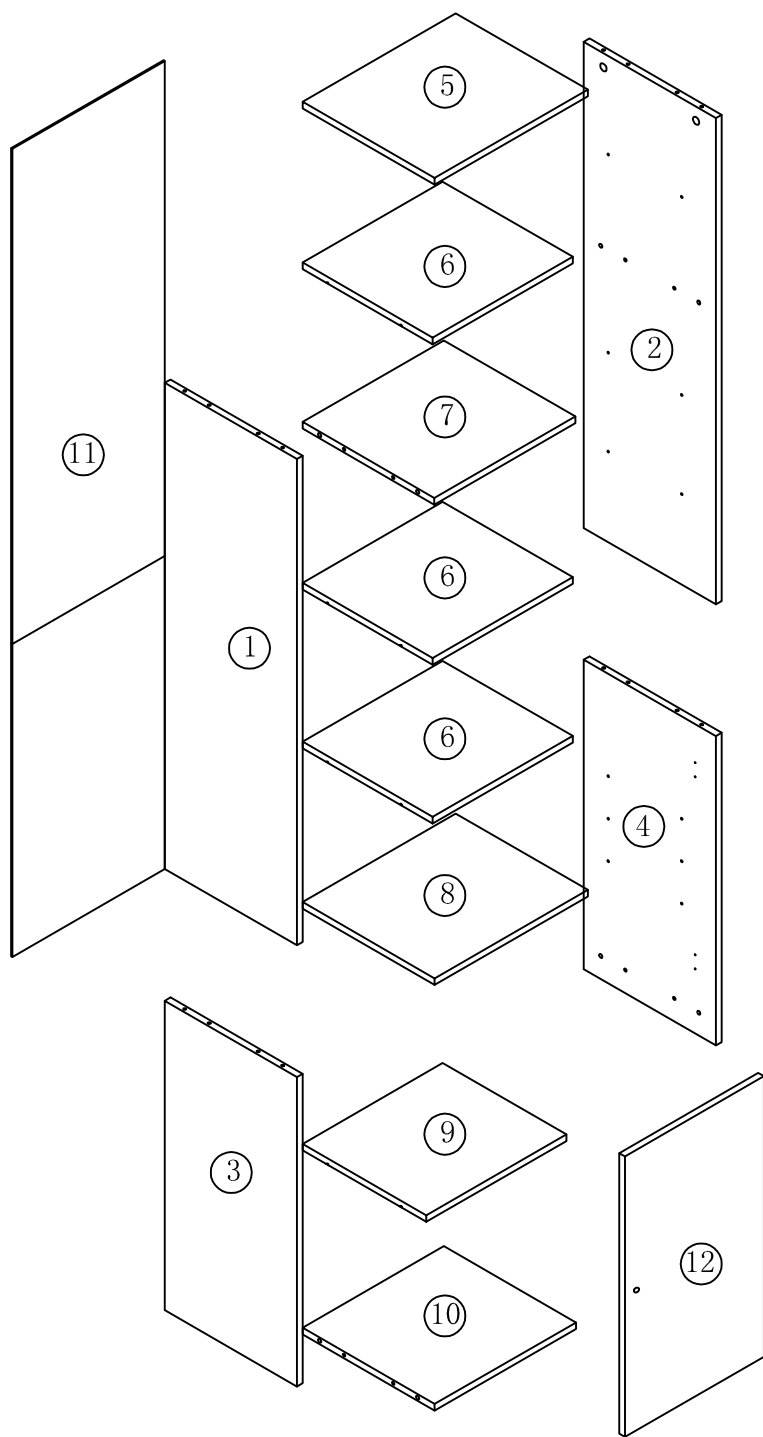



1

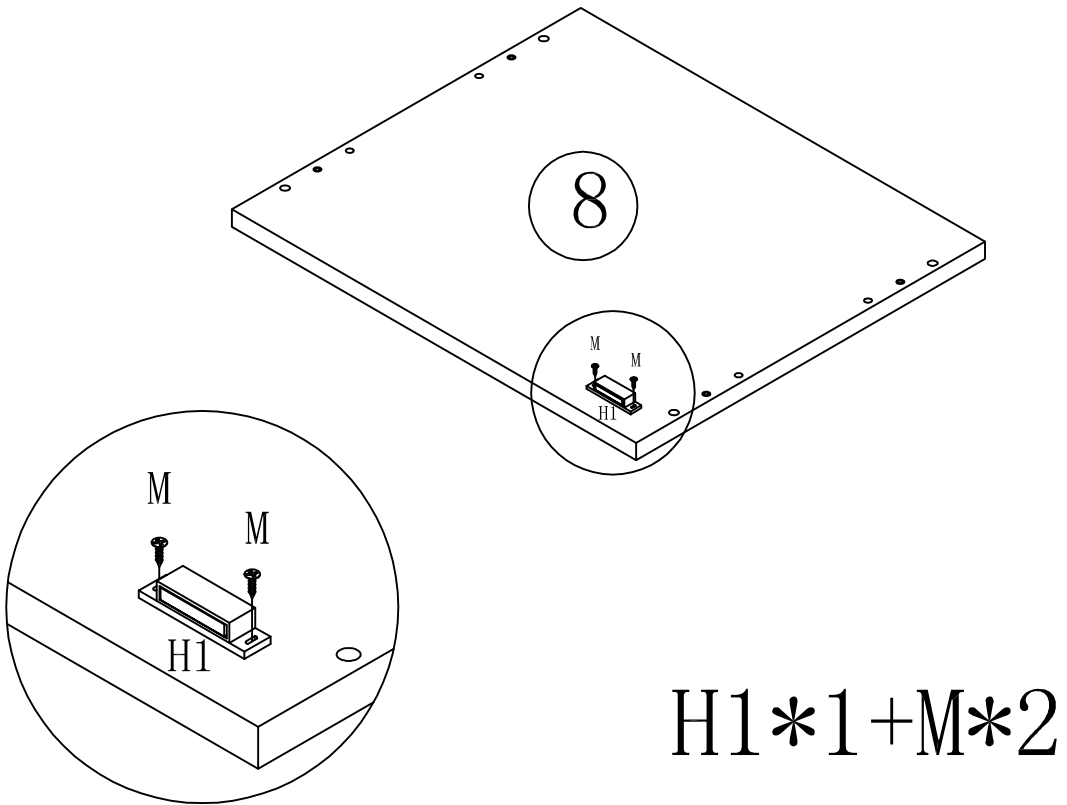

2


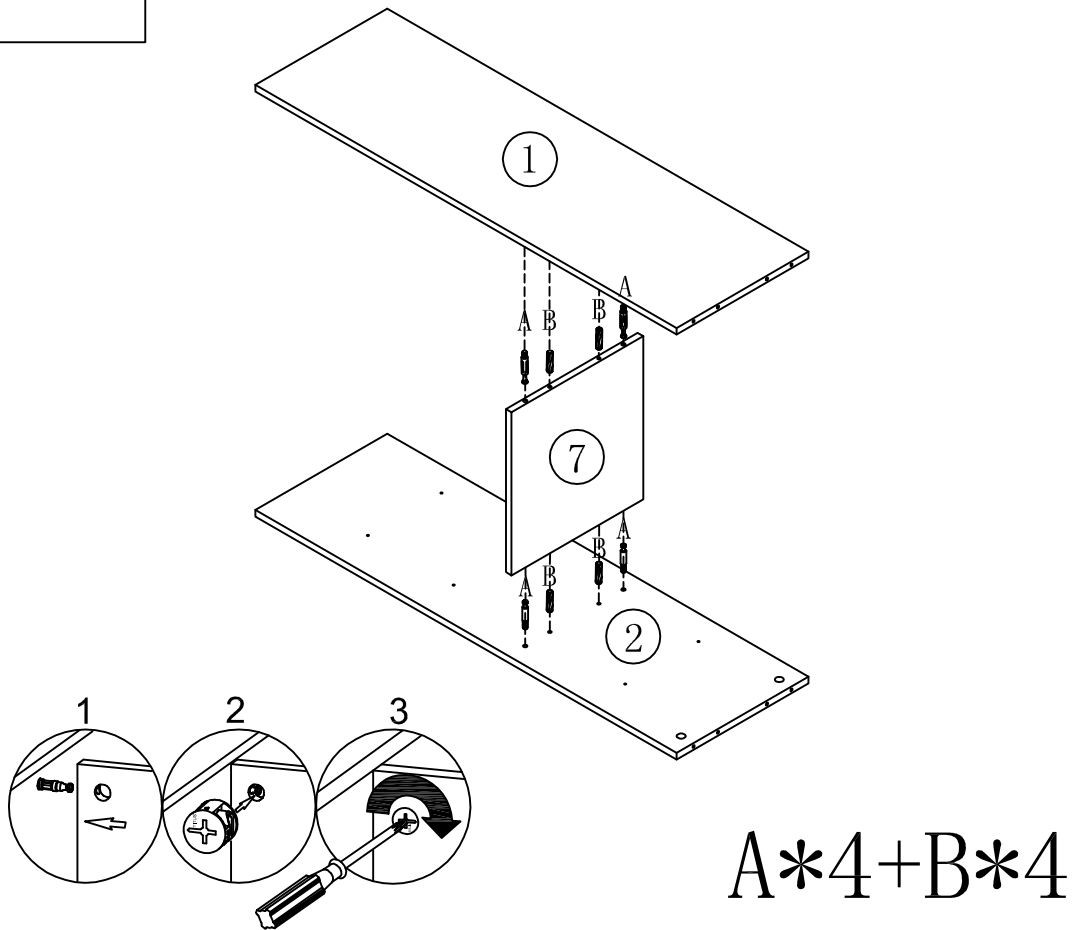


3

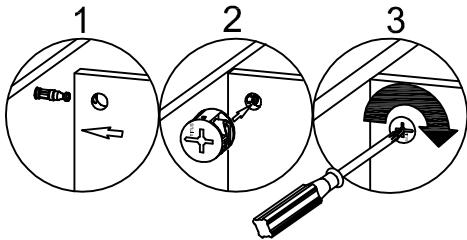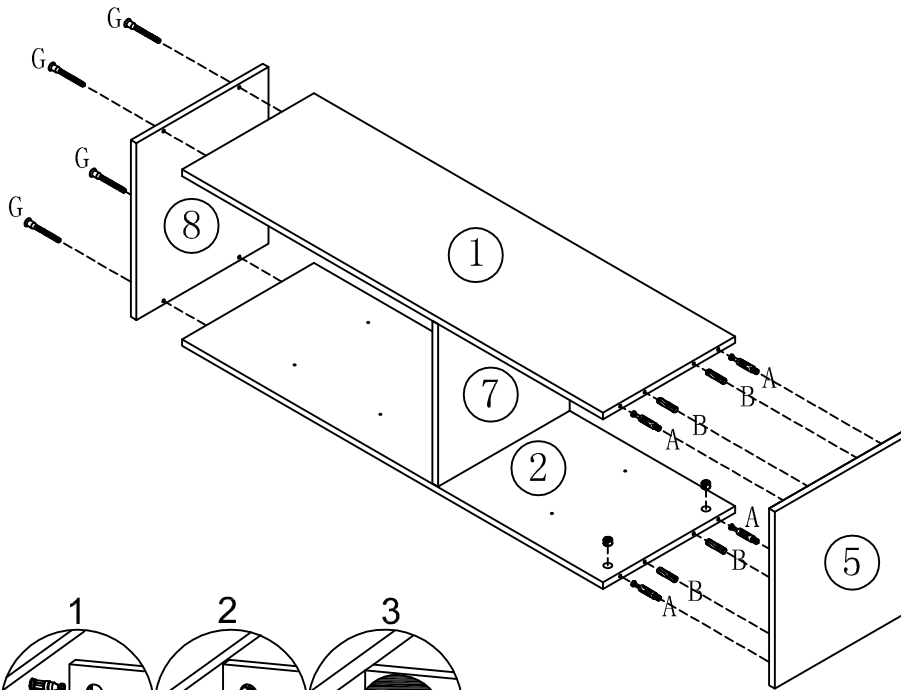



$$A*4+B*4+G*4$$

4

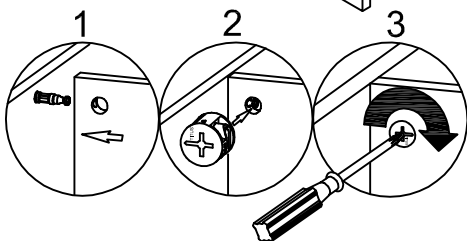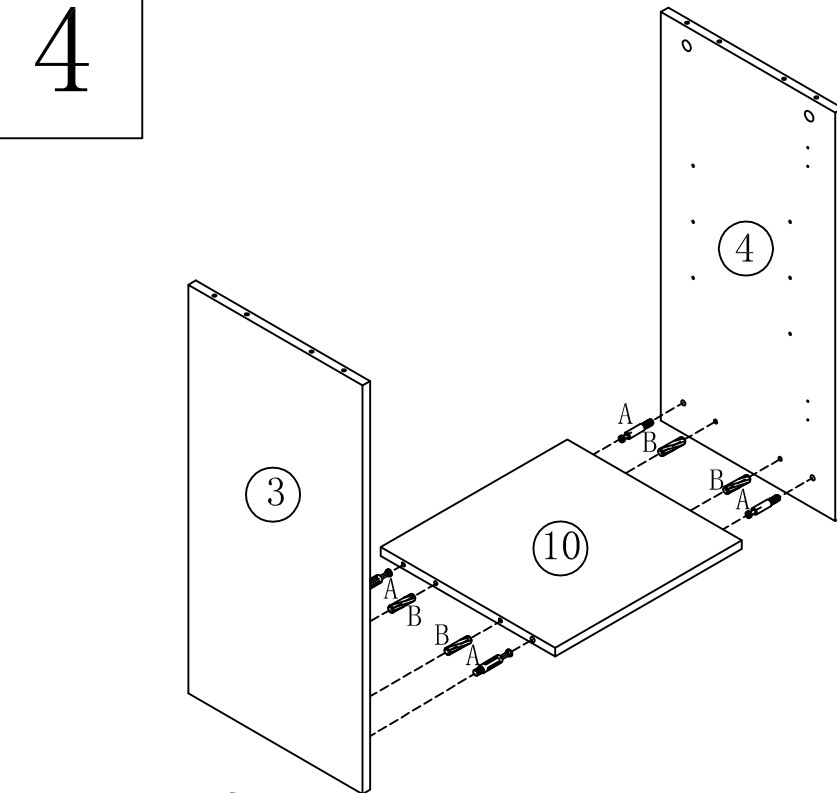


$$A*4+B*4$$

5

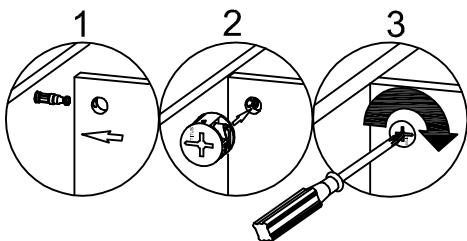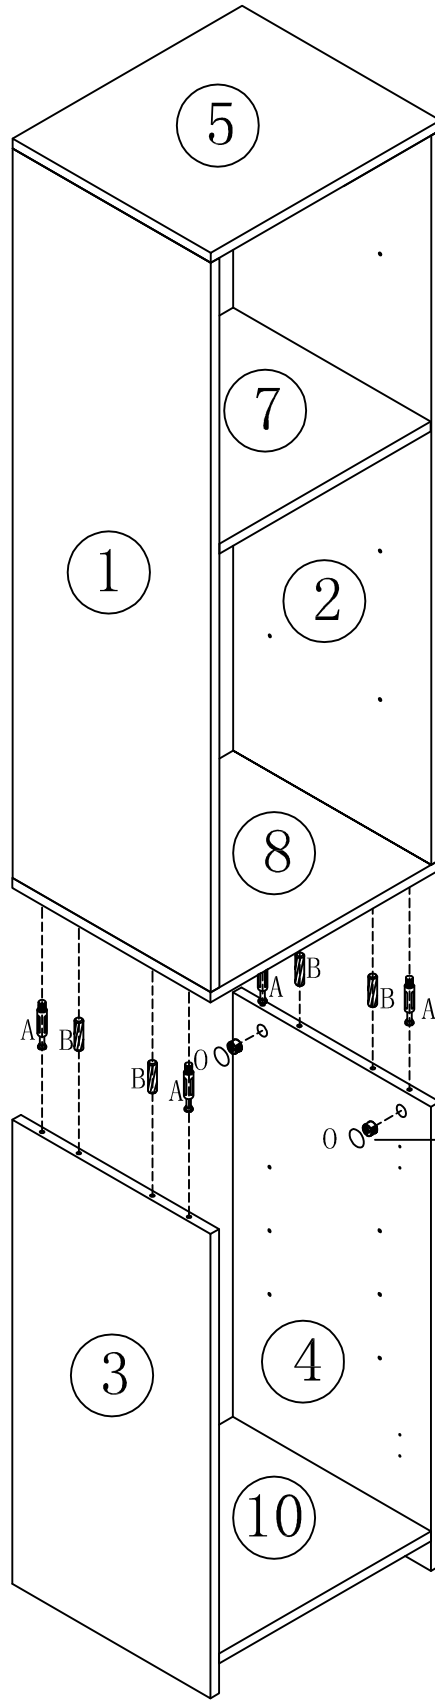



$$A*4+B*4+0*16$$

6

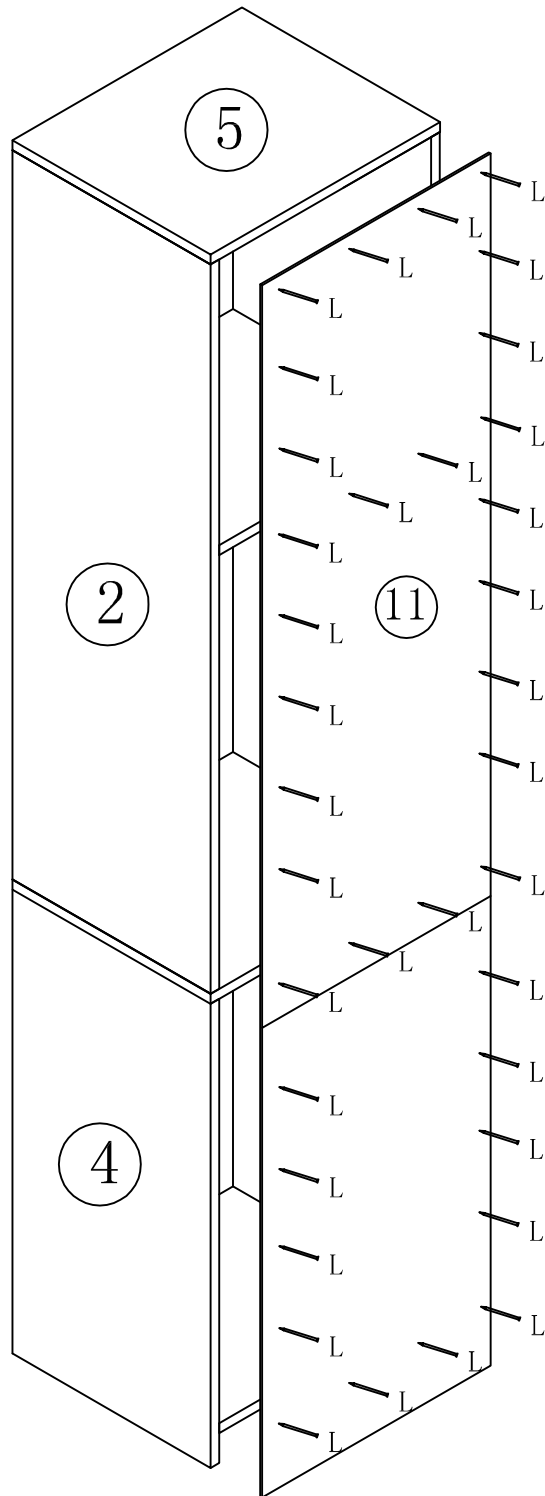


L*40

7

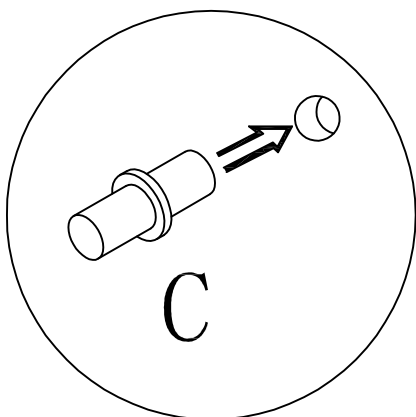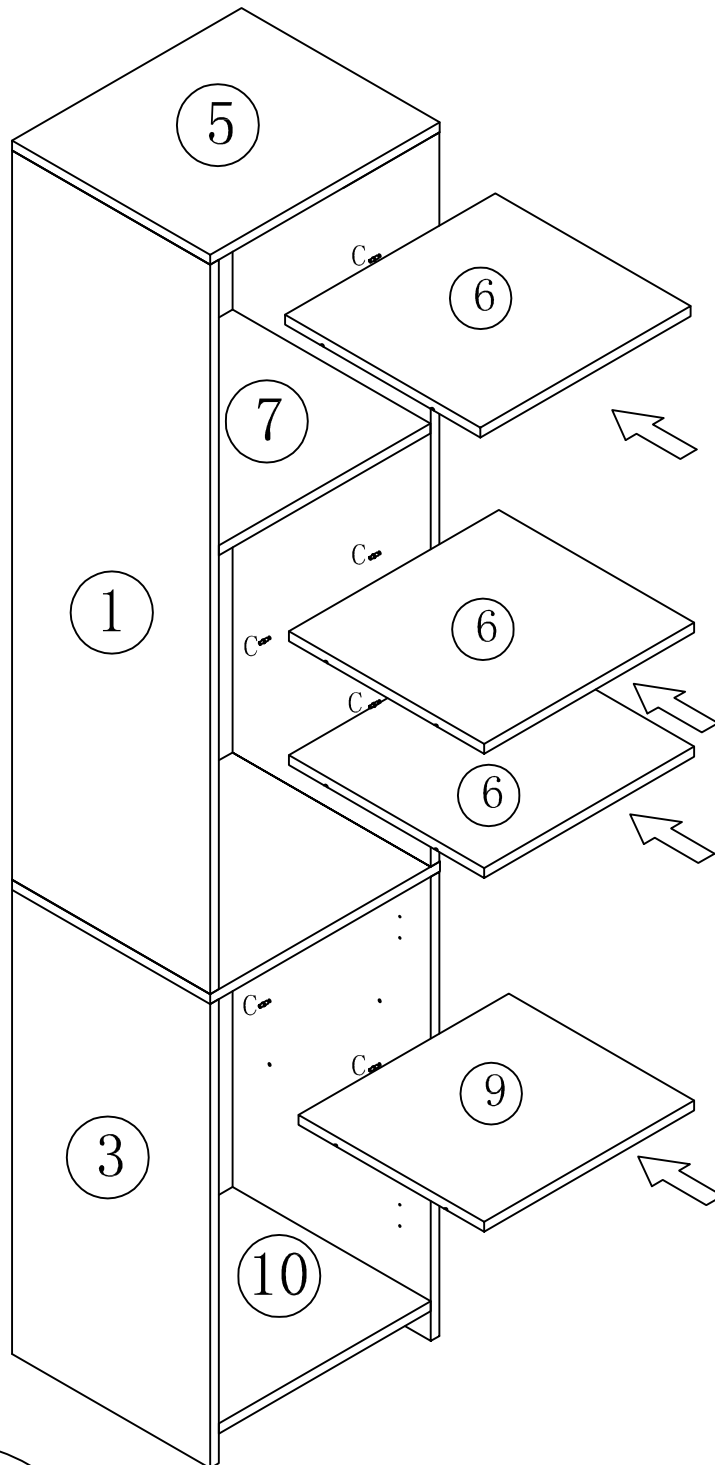


C*16

8

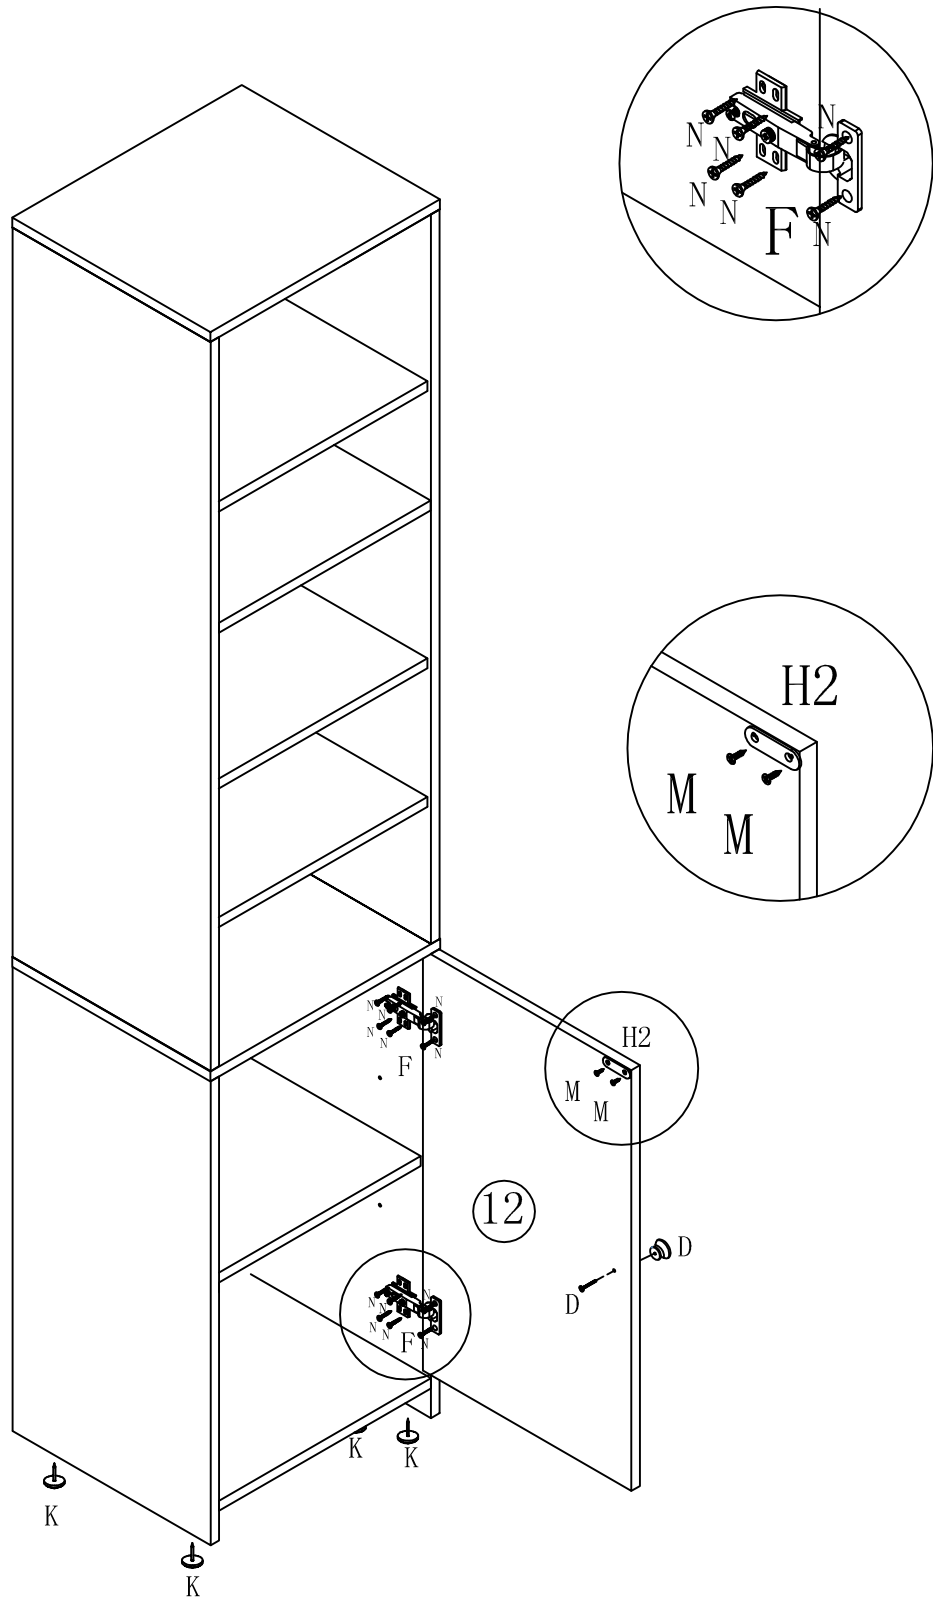

$D*1+H2*1+M*2+N*12+K*4+F*2$

9

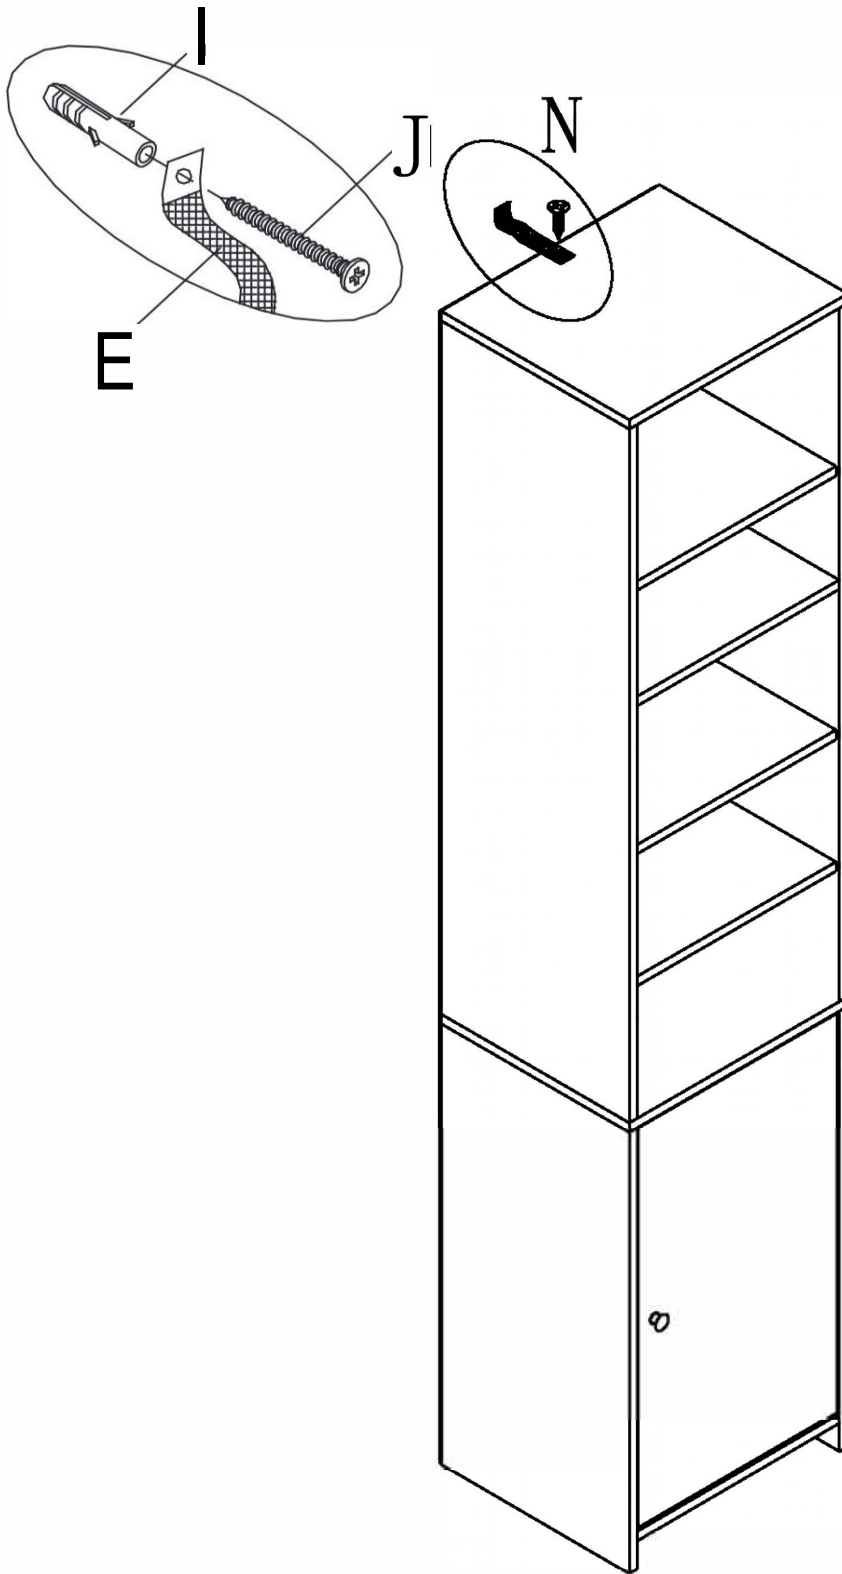

$I*1+J*1+E*1+N*1$