
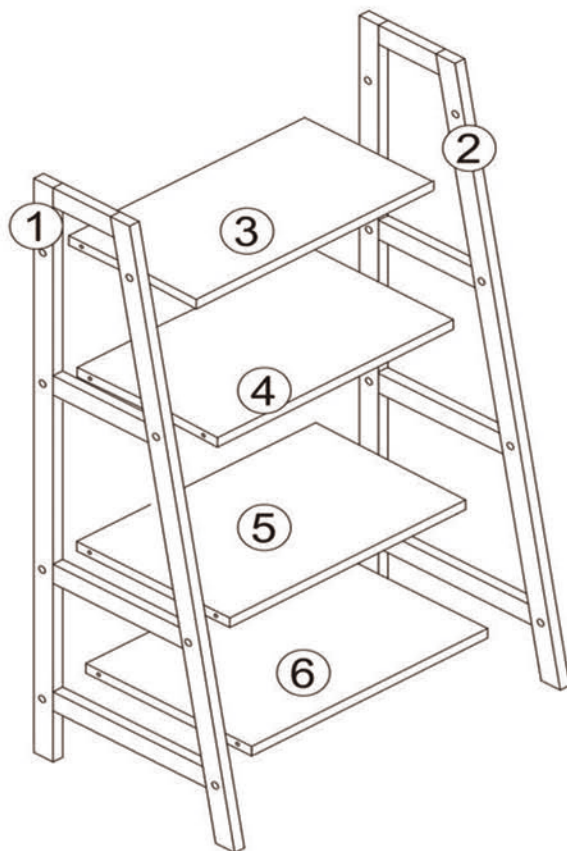



BATHROOM

ASSEMBLY INSTRUCTION

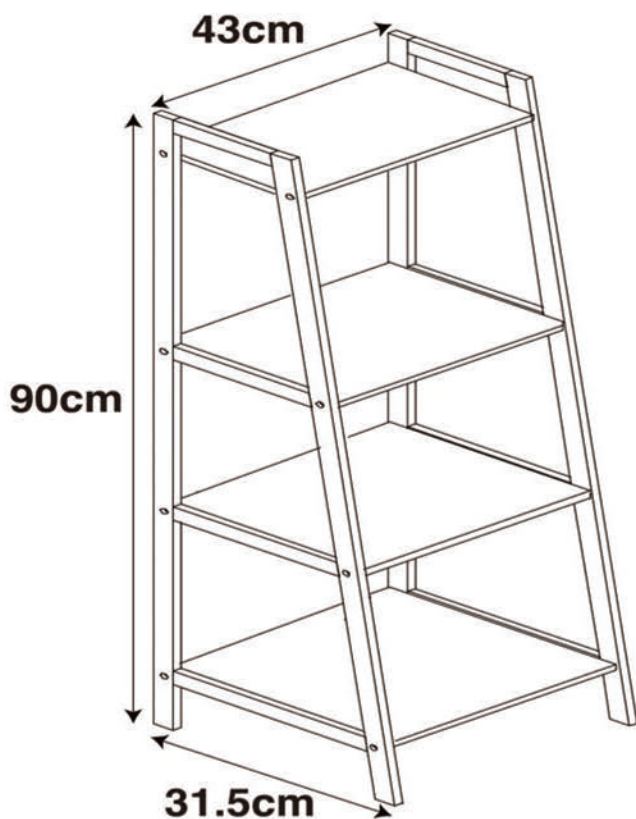


a	x6	b	x16	c	x16	d	x1	e	x1
									
WOOD DOWEL		SCREW		STICKER		THE REWIND		SCREW	
f	x1	g	x1						
									
SCREW		RAWPLUG							


STEP 1

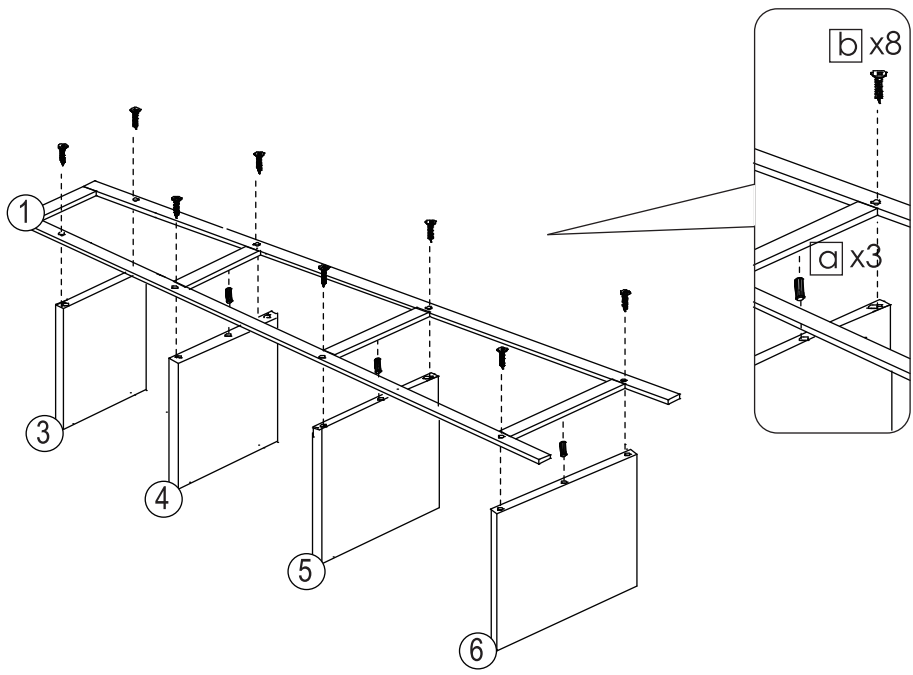

STEP 2

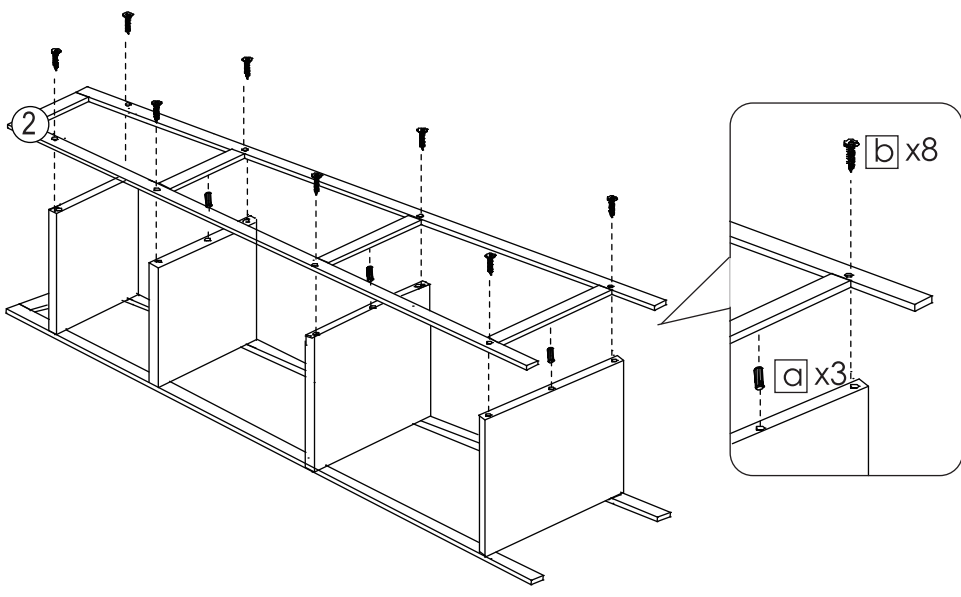

STEP 3

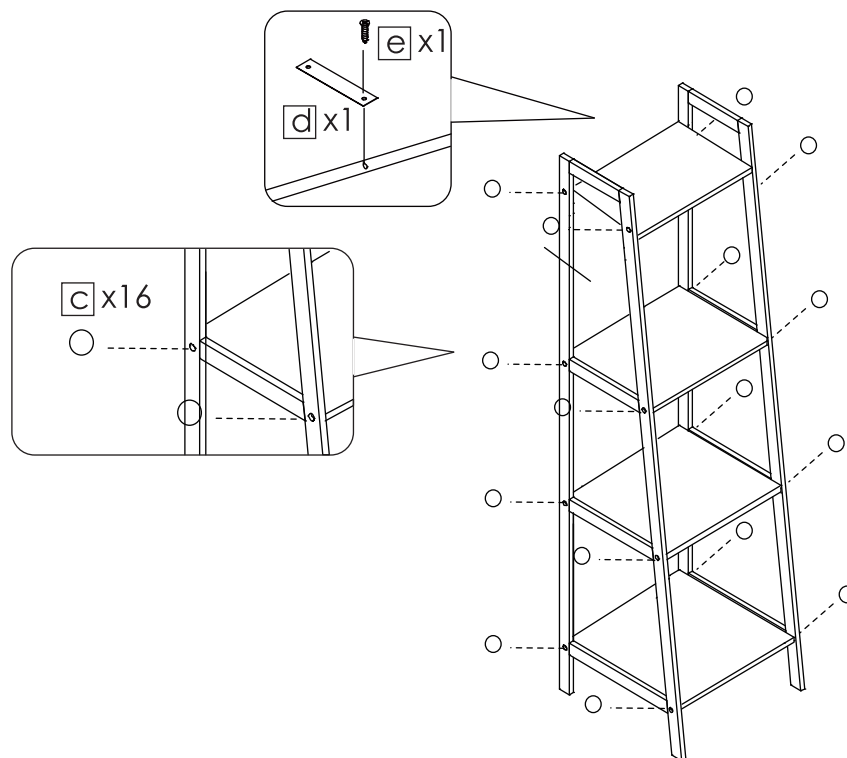

STEP 4

