

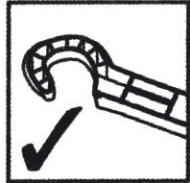
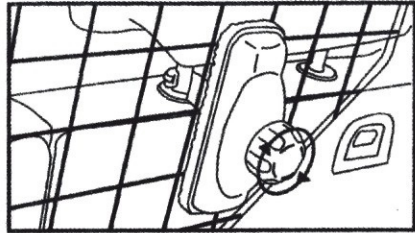


7

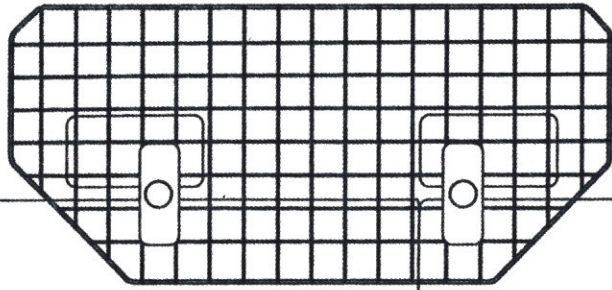


Caution: Do Not Overtighten

8

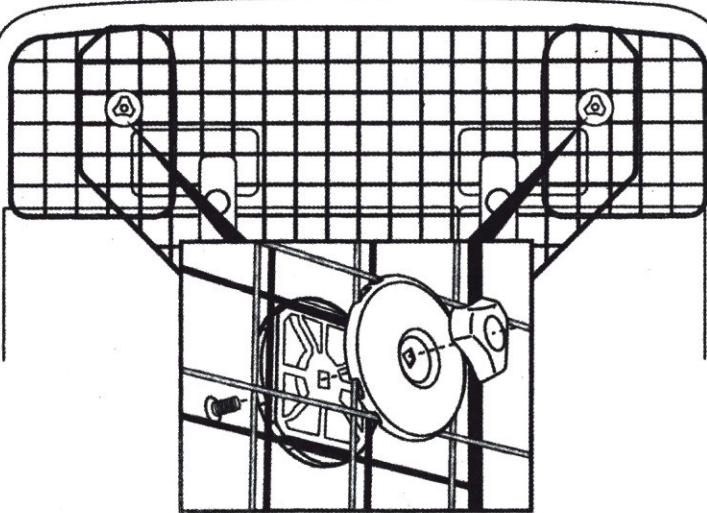

Advanced Headrest Dog Guard

Fitting Instructions

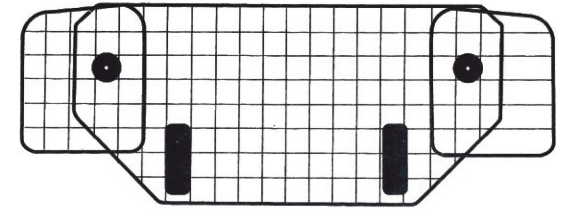

Please follow instructions carefully to ensure the safety of yourself and your passengers.


The initial assembly and fitting of this dog guard will take approximately 10 minutes.

Before you begin:


- Make sure all parts are included in the package.


Please retain these instructions for future reference.

Contents

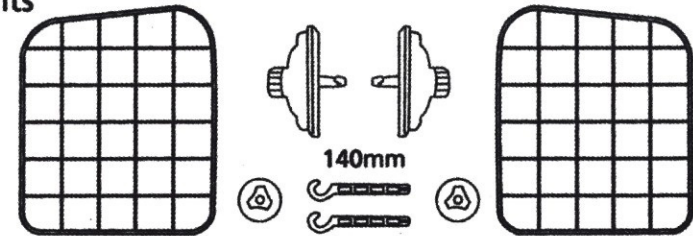

140mm

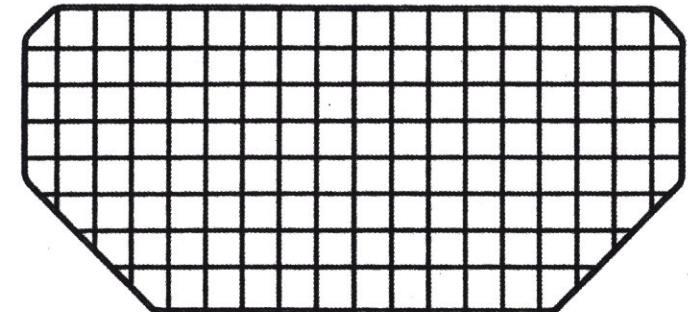

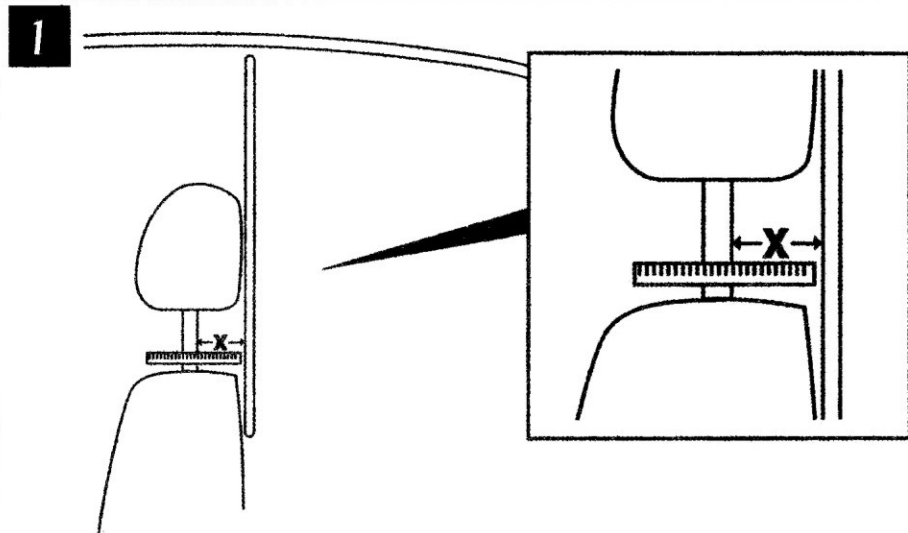

2

$x = 0 - 45\text{mm} \longrightarrow$ **4**

$x = 45+\text{mm} \longrightarrow$ **3**

